

TRANSFORMER series 3360



model	N° steps	A (mm/ inch)	B (mm/ inch)	C (mm/ inch)	D (mm/ inch)	E (mm/ inch)	F (mm/ inch)	G (mm/ inch)	H (mm/ inch)	X (mm/ inch)	Y (mm/ inch)	dynamic load (kg/lbs)	static load (kg/lbs)	weight (kg/lbs)
3361/30.0	3	2425 95"	1035 46"	710 28"	810 32"	905 35"	855 33"	1000 39"	255 10"	570 22"	760 30"	315/730	530/1170	380/840
3362/40.0	4	3565 140"	1460 57"	1045 41"	1200 47"	1320 52"	855 33"	1000 39"	305 12"	850 33"	1130 44"	510/1125	600/1320	570/1255
3362L40.0	4	3565 140"	1460 57"	1045 41"	1200 47"	1320 52"	1255 49"	1400 55"	305 12"	850 33"	1130 44"	480/1060	680/1500	620/1365
3362/50.0	5	4465 176"	1760 69"	1345 53"	1500 59"	1620 64"	855 33"	1000 39"	305 12"	1060 41"	1400 55"	420/925	600/1320	610/1345

TRANSFORMER WITH POP-OUT SYSTEM

3362.40.1	4	3565 140"	1460 57"	1045 41"	1200 47"	1320 52"	855 33"	1000 39"	445 17" 1/2	850 33"	1130 44"	510/1125	600/1320	720/1585
3362L40.1	4	3565 140"	1460 57"	1045 41"	1200 47"	1320 52"	1255 49"	1400 55"	445 17" 1/2	850 33"	1130 44"	480/1060	680/1500	800/1760

FOR POP-OUT DIMENSIONS SEE PAGE MODEL 3370/3762

MULTIFUNCTIONAL PLATFORM.

The loading capacity includes the total platform weight (at shipyard's care), the full loaded tender or the jet ski.

The declared lifting capacity is assured if the load is positioned in the middle of measure C

*Overcenter valve placed beyond the bulwark

NEVER USE THE TRANSFORMER AS A SPRINGBOARD. DIVING MAY CAUSE STRONG STRAINS THAT MIGHT DAMAGE THE TRANSFORMER AND ITS FASTENING ELEMENTS.

